


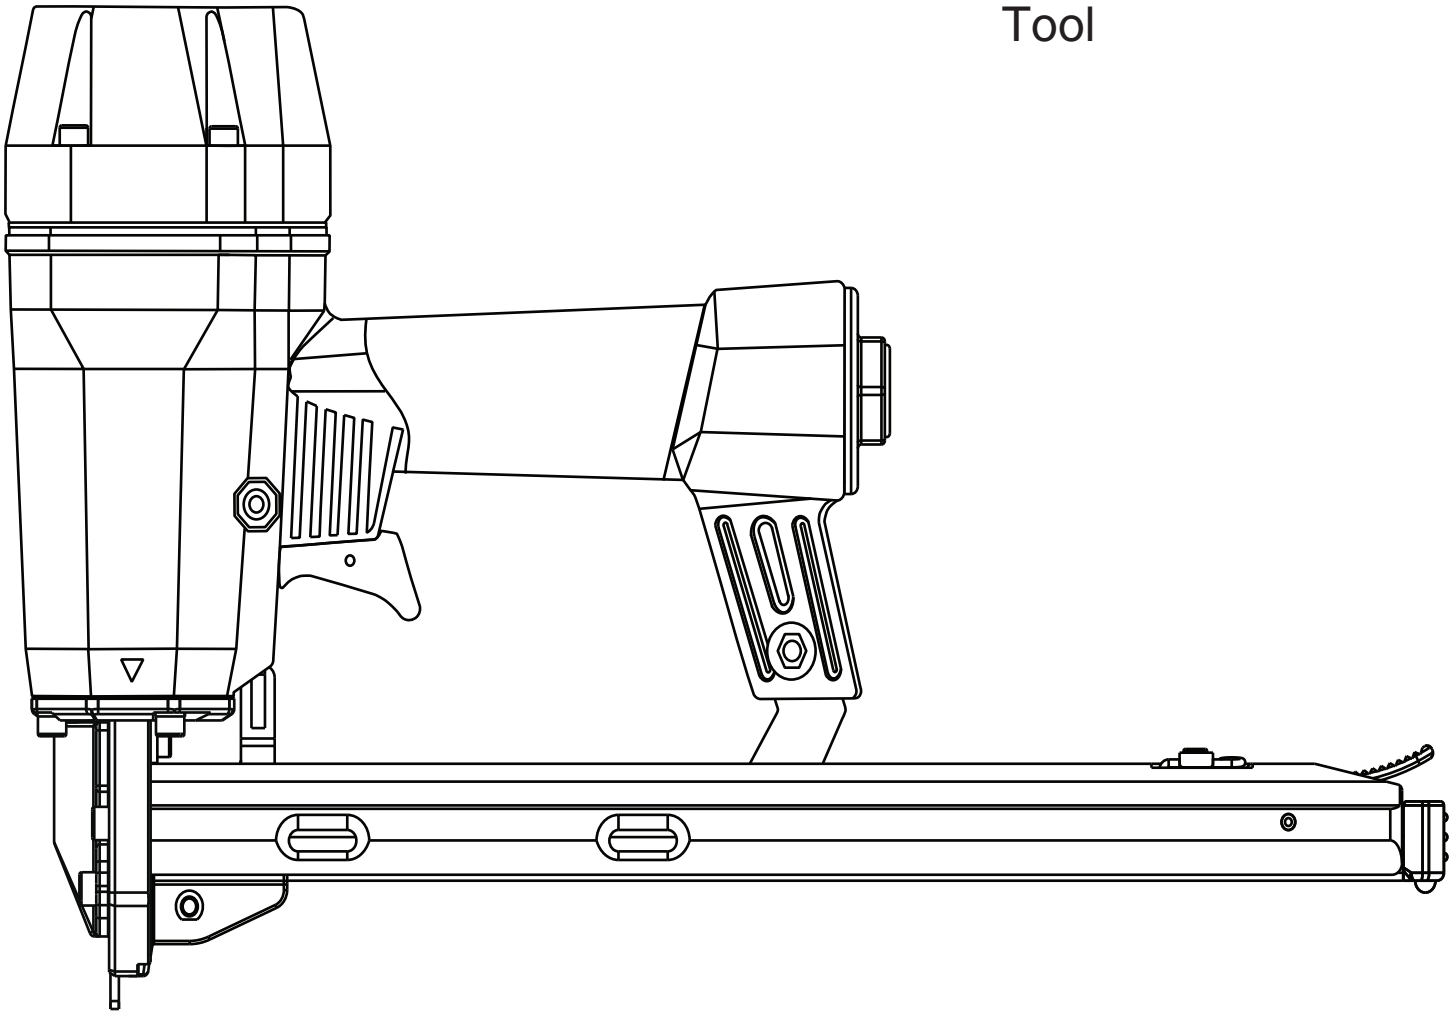

**MODEL PCF 1000**  
Corrugated Fastener  
Tool



**IMPORTANT!**

**DO NOT DESTROY**

It is the customer's responsibility to have all operators and service personnel read and understand this manual.

**TOOL SCHEMATIC**

## PARTS LEGEND

## PCF 1000, 502360

|      |         |   |                       |      |         |   |                     |
|------|---------|---|-----------------------|------|---------|---|---------------------|
| 1    | 502361  | 4 | Screw                 | 37   | 502718  | 1 | Spring              |
| 2    | 1015483 | 8 | Washer                | * 38 | 501648  | 2 | O-Ring              |
| 3    | 502362  | 1 | Top Cap               | * 39 | 502385  | 1 | Trigger Valve       |
| 4    | 502363  | 1 | Piston Stop           | 40   | 502386  | 1 | Bushing             |
| 5    | 502364  | 1 | Spring                | 41   | 502387  | 1 | Trigger Valve Assy. |
| * 6  | 502365  | 2 | O-Ring                | 42   | 501635  | 1 | Screw               |
| * 7  | 501621  | 1 | O-Ring                | → 43 | 511159  | 1 | Nut                 |
| 8    | 502366  | 1 | Washer                | 44   | 502389  | 2 | Screw               |
| 9    | 502367  | 1 | Valve                 | 45   | 502390  | 1 | Support             |
| 10   | 502368  | 1 | Valve Assy.           | → 46 | 511160  | 1 | Spacer              |
| * 11 | 502369  | 1 | O-Ring                | → 47 | 511161  | 1 | Pusher              |
| 12   | 502370  | 1 | Piston                | 48   | 502393  | 1 | Screw               |
| * 13 | 502371  | 1 | Driver Blade          | 49   | 502394  | 1 | Spring              |
| * 14 | 502372  | 1 | Bumper                | → 50 | 511162  | 1 | Spacer Stop         |
| * 15 | 501625  | 1 | O-Ring                | 51   | 502396  | 1 | Screw               |
| 16   | 502419  | 1 | Driver Blade Seal     | 52   | 502397  | 1 | Washer              |
| 17   | 502373  | 1 | Noseplate             | 53   | 502398  | 1 | Magazine            |
| 18   | 502374  | 1 | Lower WCE             | 54   | 502399  | 1 | Nut                 |
| * 19 | 502428  | 1 | Spring, WCE           | 55   | 502407  | 1 | Latch               |
| 20   | 502375  | 2 | Screw                 | 56   | 502408  | 1 | Screw               |
| 21   | 502376  | 1 | WCE, Spring Cover     | 57   | 502409  | 1 | Spring              |
| ■ 22 | 1015482 | 2 | Screw                 | 58   | 502410  | 1 | Slider              |
| ■ 23 | 1015506 | 4 | Screw                 | 59   | 502411  | 1 | Spring              |
| 24   | 502377  | 1 | Sleeve Seal           | 60   | 502412  | 1 | Roller              |
| * 25 | 502378  | 1 | O-Ring                | 61   | 502413  | 1 | Pin                 |
| 26   | 502379  | 1 | Sleeve                | 62   | 502414  | 1 | Inlet Cap           |
| * 27 | 502380  | 1 | O-Ring                | * 63 | 502415  | 1 | O-Ring              |
| 28   | 502381  | 1 | Gasket                | 64   | 502416  | 1 | Trigger Assy.       |
| 29   | 502382  | 1 | Housing               | 65   | 1015317 | 1 | Screw               |
| * 30 | 1015303 | 1 | O-Ring                | 66   | 502417  | 1 | Safety Guide        |
| 31   | 502383  | 1 | Trigger Valve Housing | ■ 67 | 501696  | 2 | Screw               |
| * 32 | 501860  | 1 | O-Ring                | 68   | 502420  | 1 | Plate               |
| * 33 | 1015511 | 1 | O-Ring                | 69   | 501140  | 1 | Logo, Housing Left  |
| * 34 | 501418  | 1 | O-Ring                | 70   | 501141  | 1 | Logo, Housing Right |
| 35   | 502384  | 1 | Valve Piston          | 71   | 502426  | 1 | Warning Label       |
| * 36 | 1015514 | 1 | O-Ring                | 72   | 502427  | 1 | Oil Daily Label     |

\* Denotes Normal Wear Items.

\*\* Make sure Warning Label (502426) is properly affixed.


Replace if necessary.

Label available at no charge through the Service Parts Dept.

▲ Apply Loctite 242 (Blue) Part No. 093500.

■ Apply Loctite (Green) Part No. 401491

→ Denotes New Change

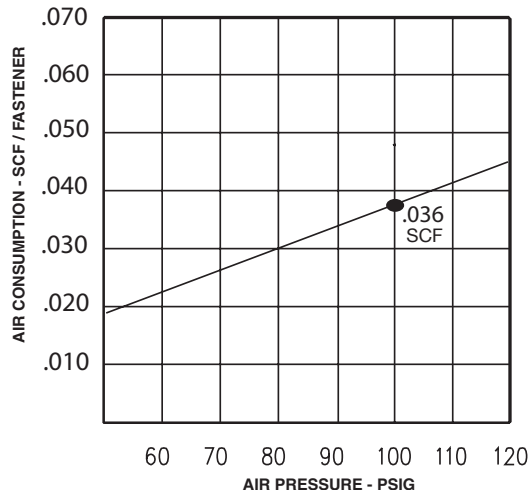

## SAFETY INSTRUCTIONS

 
### WEAR EYE AND HEARING PROTECTION



Always wear hearing protection and eye protection devices, including side shields when operating or working in the vicinity of a tool.



### DO NOT EXCEED MAXIMUM RECOMMENDED AIR PRESSURE




Operate the tool using only the recommended air pressure. Do not exceed the maximum air pressure marked on the tool. Be sure the air pressure gauge is operating properly and check it at least twice a day.



Never use any bottled air or gases such as oxygen to operate the tool since they could cause the tool to explode.

# PCF 1000

## 502360

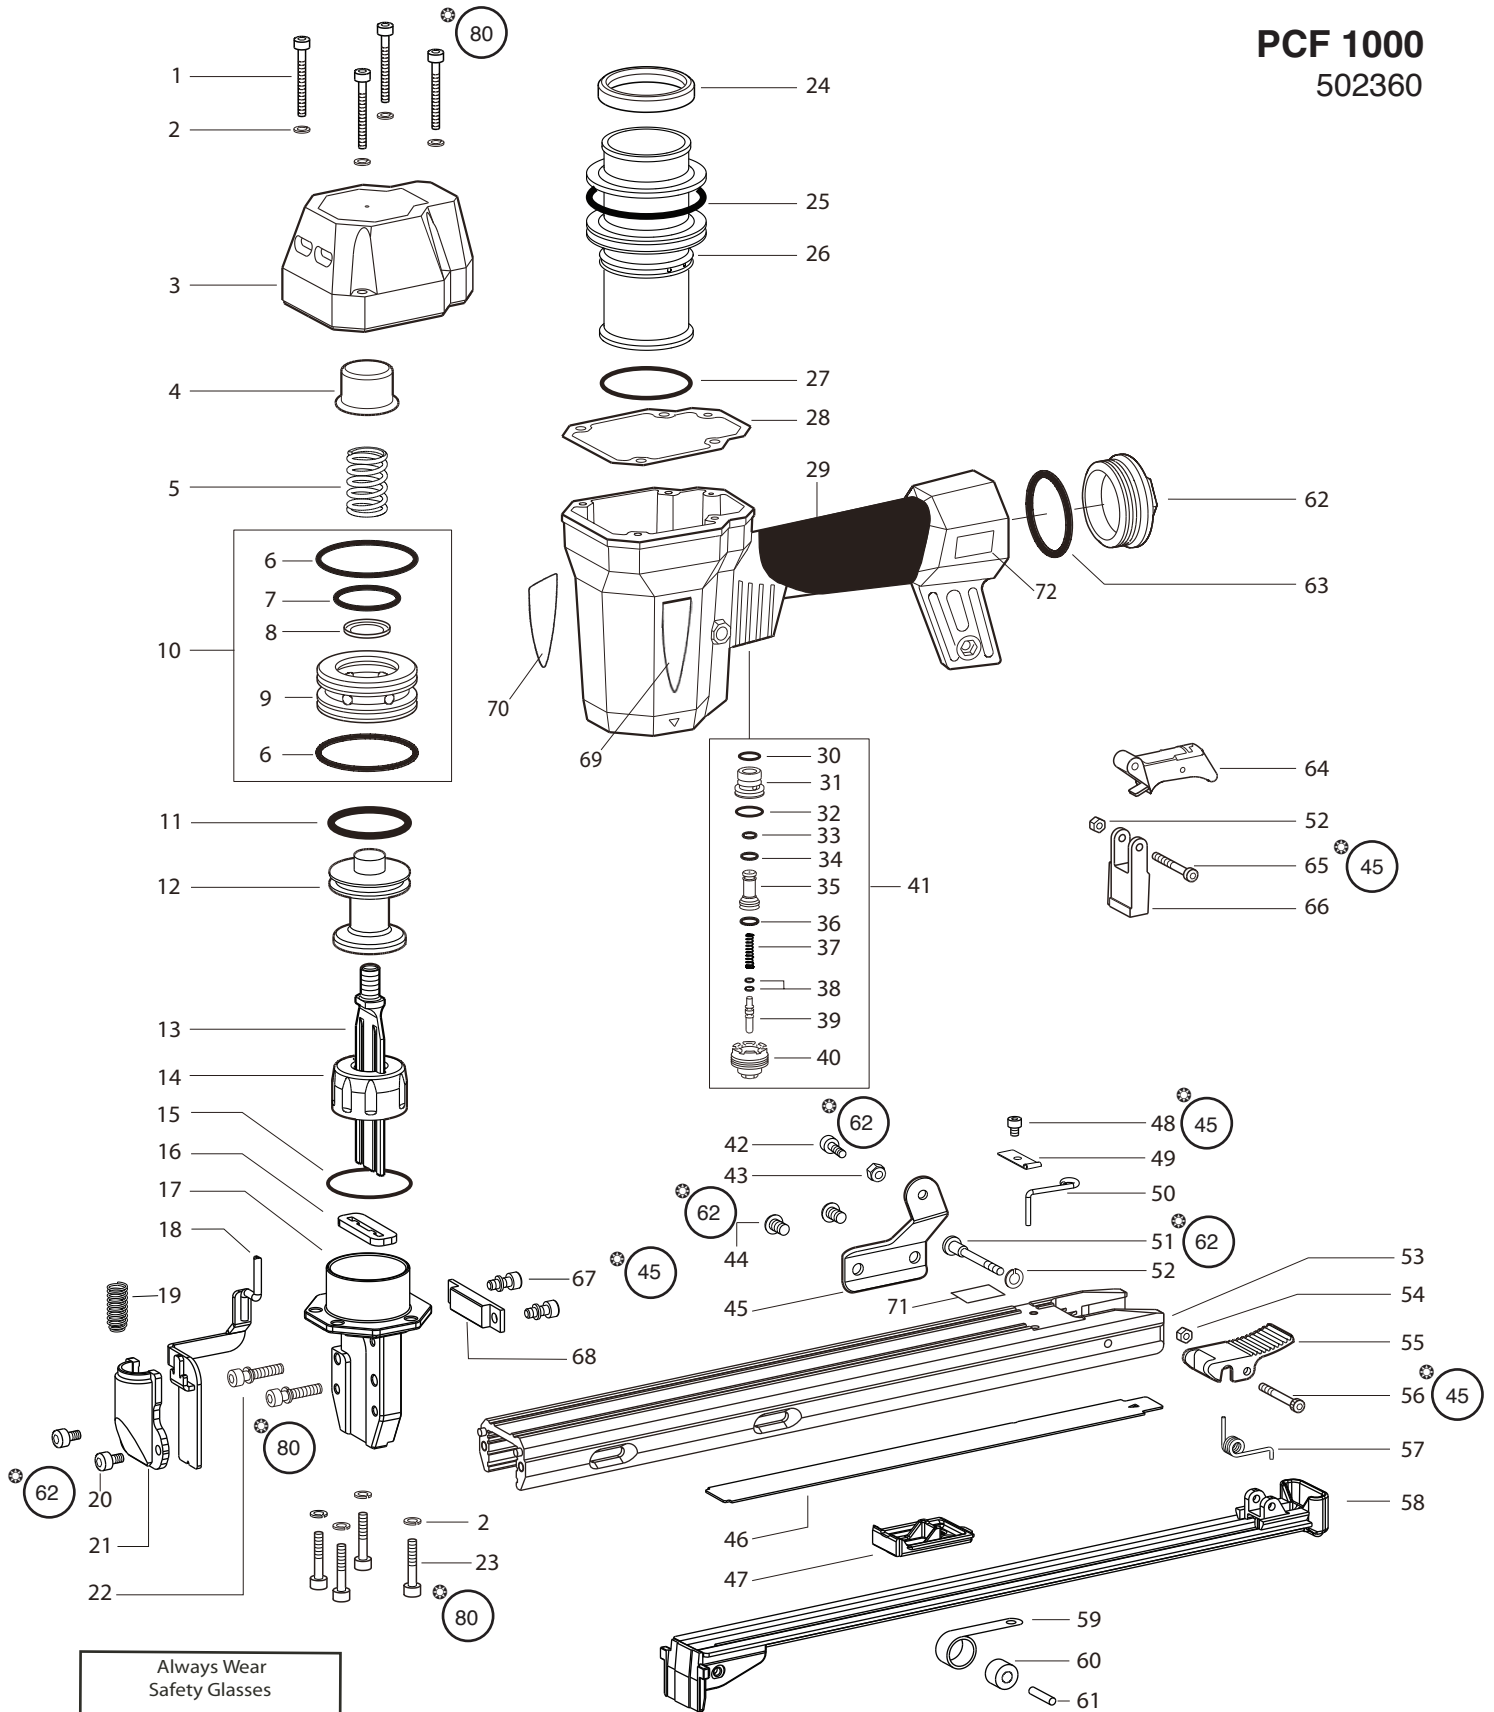

Always Wear  
Safety Glasses



When Using  
Power Tools  
401382

\*Torque Values  
IN•LBS

# ACCESSORIES

---

## Lubricants and Loctite

Loctite 242 (Blue)

Loctite 620 (Green)

Lubricating Oil 16 oz.

Lubricating Oil with Antifreeze 8 oz.

Chemplex 710 Lubricant 1lb.



Part No. 093500

Part No. 401491

Part No. 403720

Part No. 219090

Part No. 403734

## Tool Cleaner

Ideal cleaner for all Paslode® tools.



Part No. 219348

## Safety Glasses


Clear



Part No. 401382



## Sequential Trigger kit

(SILVER/GREY TRIGGER)

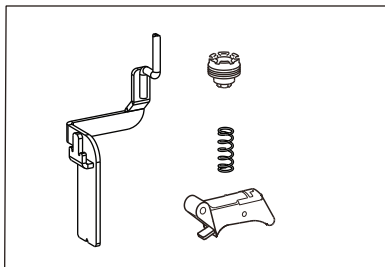

Part No. 502424

## Piston Removal Tool

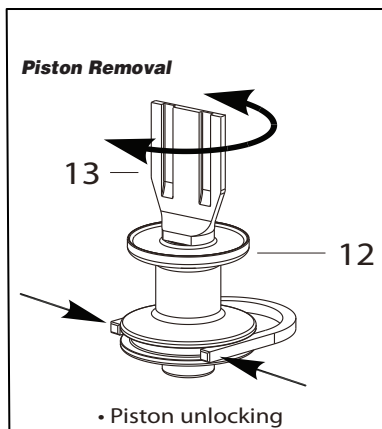 

Part No. 502421



An Illinois Tool Works Company

120 Travail Road

Markham, Ontario

L3S 3J1

[www.paslode.ca](http://www.paslode.ca)