


90F40B
B20057

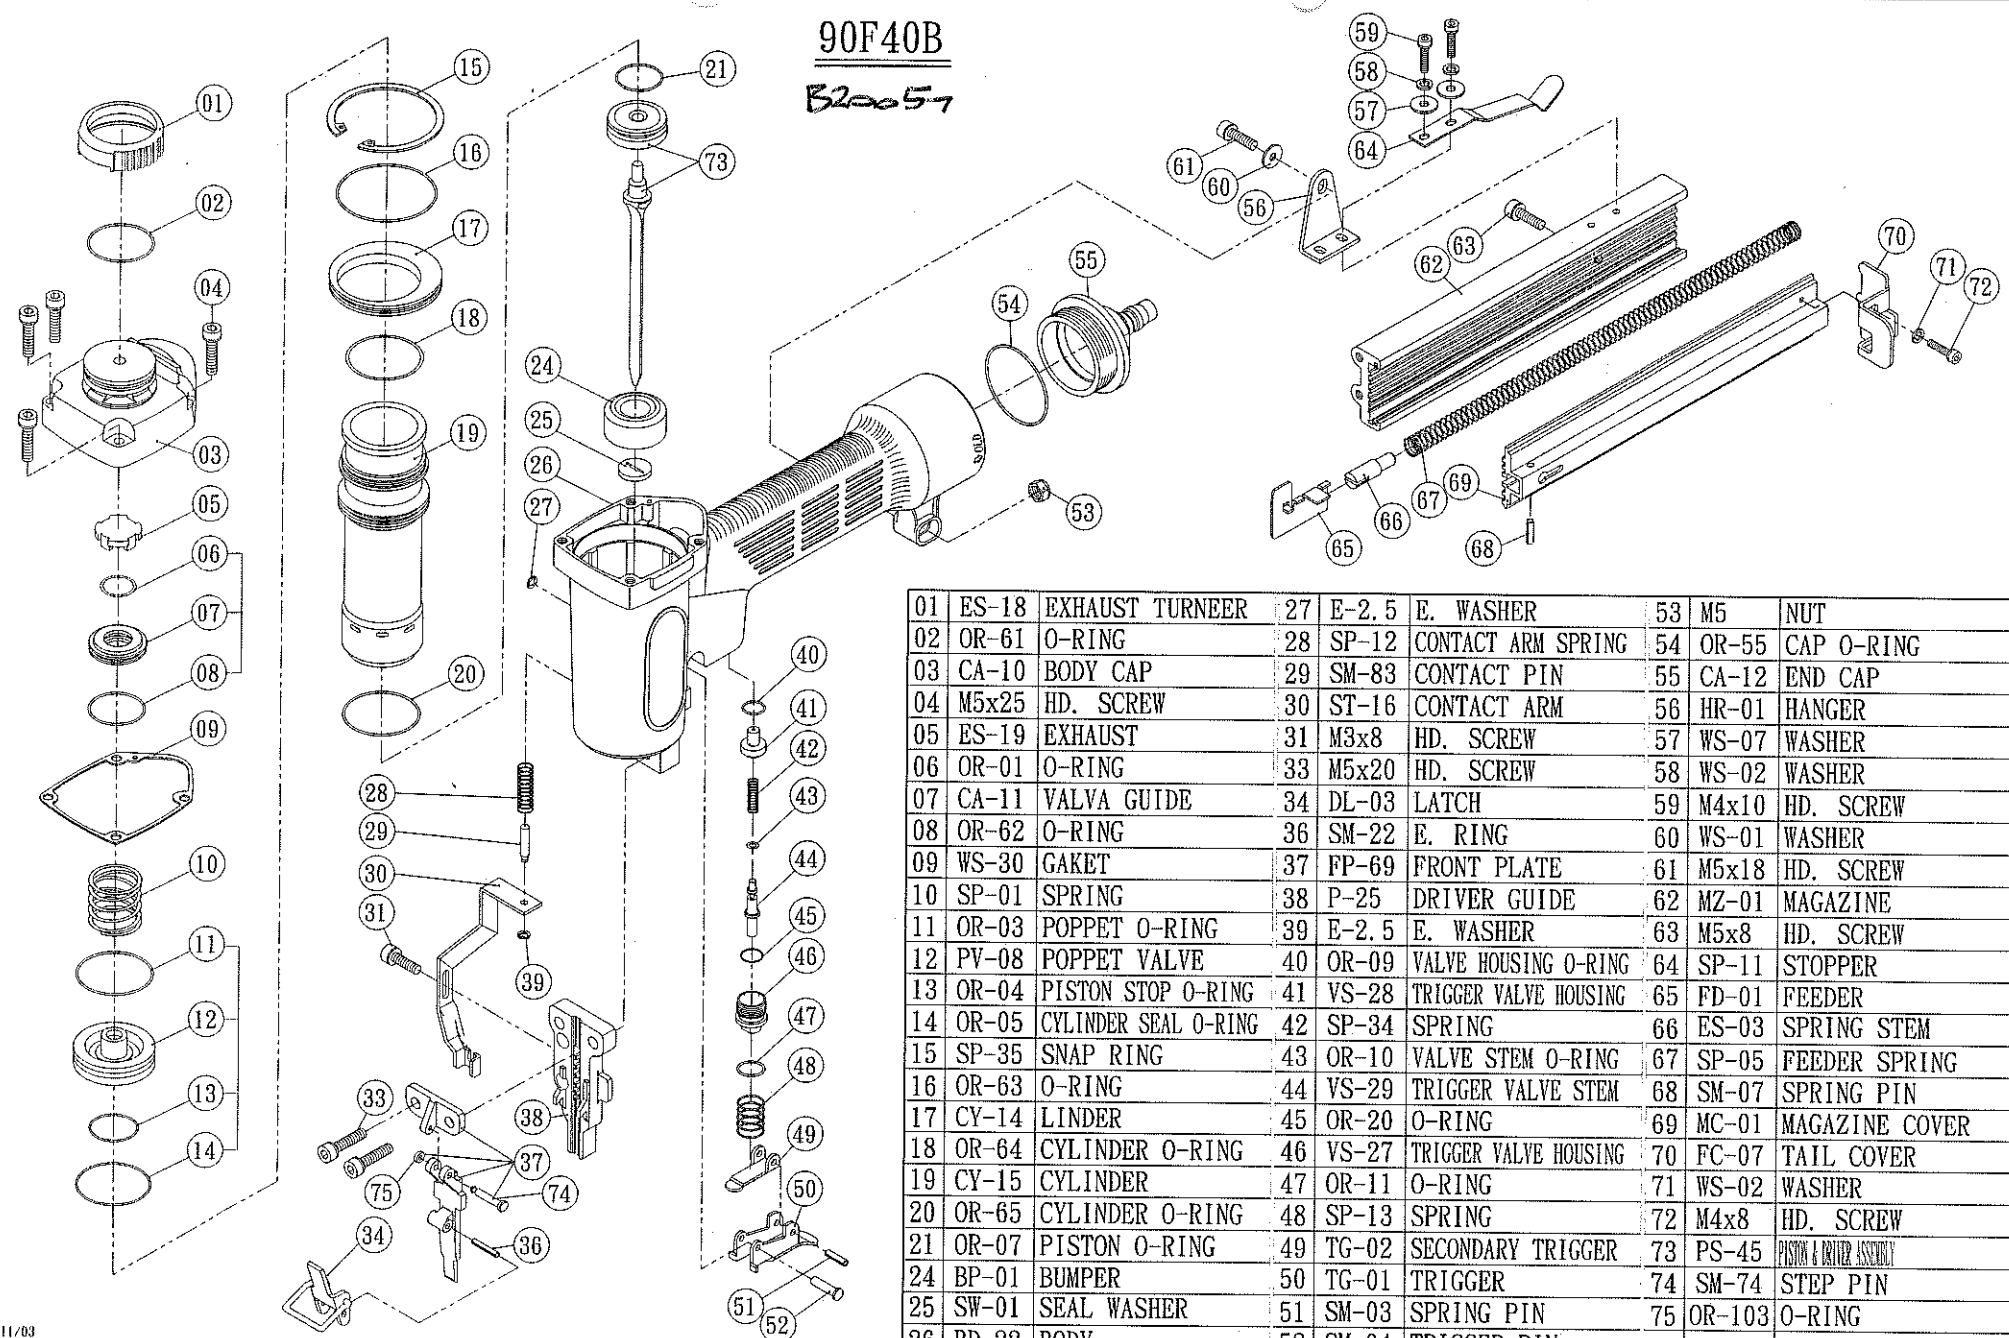

01	ES-18	EXHAUST TURNER	27	E-2.5	E. WASHER	53	M5	NUT
02	OR-61	O-RING	28	SP-12	CONTACT ARM SPRING	54	OR-55	CAP O-RING
03	CA-10	BODY CAP	29	SM-83	CONTACT PIN	55	CA-12	END CAP
04	M5x25	HD. SCREW	30	ST-16	CONTACT ARM	56	HR-01	HANGER
05	ES-19	EXHAUST	31	M3x8	HD. SCREW	57	WS-07	WASHER
06	OR-01	O-RING	33	M5x20	HD. SCREW	58	WS-02	WASHER
07	CA-11	VALVA GUIDE	34	DL-03	LATCH	59	M4x10	HD. SCREW
08	OR-62	O-RING	36	SM-22	E. RING	60	WS-01	WASHER
09	WS-30	GAKET	37	FP-69	FRONT PLATE	61	M5x18	HD. SCREW
10	SP-01	SPRING	38	P-25	DRIVER GUIDE	62	MZ-01	MAGAZINE
11	OR-03	POPPET O-RING	39	E-2.5	E. WASHER	63	M5x8	HD. SCREW
12	PV-08	POPPET VALVE	40	OR-09	VALVE HOUSING O-RING	64	SP-11	STOPPER
13	OR-04	PISTON STOP O-RING	41	VS-28	TRIGGER VALVE HOUSING	65	FD-01	FEEDER
14	OR-05	CYLINDER SEAL O-RING	42	SP-34	SPRING	66	ES-03	SPRING STEM
15	SP-35	SNAP RING	43	OR-10	VALVE STEM O-RING	67	SP-05	FEEDER SPRING
16	OR-63	O-RING	44	VS-29	TRIGGER VALVE STEM	68	SM-07	SPRING PIN
17	CY-14	LINDER	45	OR-20	O-RING	69	MC-01	MAGAZINE COVER
18	OR-64	CYLINDER O-RING	46	VS-27	TRIGGER VALVE HOUSING	70	FC-07	TAIL COVER
19	CY-15	CYLINDER	47	OR-11	O-RING	71	WS-02	WASHER
20	OR-65	CYLINDER O-RING	48	SP-13	SPRING	72	M4x8	HD. SCREW
21	OR-07	PISTON O-RING	49	TG-02	SECONDARY TRIGGER	73	PS-45	PISTON & DRIVER ASSEMBLY
24	BP-01	BUMPER	50	TG-01	TRIGGER	74	SM-74	STEP PIN
25	SW-01	SEAL WASHER	51	SM-03	SPRING PIN	75	OR-103	O-RING
26	BD-22	BODY	52	SM-04	TRIGGER PIN			